



ROLL WITH THE BEST!

CASTER & WHEEL PERFORMANCE TIPS

For continued optimum performance of your Streeter Super Stand we suggest some simple maintenance on all pneumatic casters and wheels prior to initial use and periodically thereafter:

CASTERS - SWIVEL & RIGID STYLE



1) Check tightness of the four wheel & hub mounting bolts/nuts



2) Adjust air pressure to specified pressure listed on sidewall



3) Grease/spray-lube spindle, hub and caster swivel plate (if applicable)

PNEUMATIC WHEELS



1) Check tightness of the four wheel & hub mounting bolts/nuts



2) Adjust air pressure to specified pressure listed on sidewall



3) Grease/spray-lube hub bearing (if applicable)



For additional assistance, call at (262) 457-5018